




PICO®

8955 Specifications Sheet

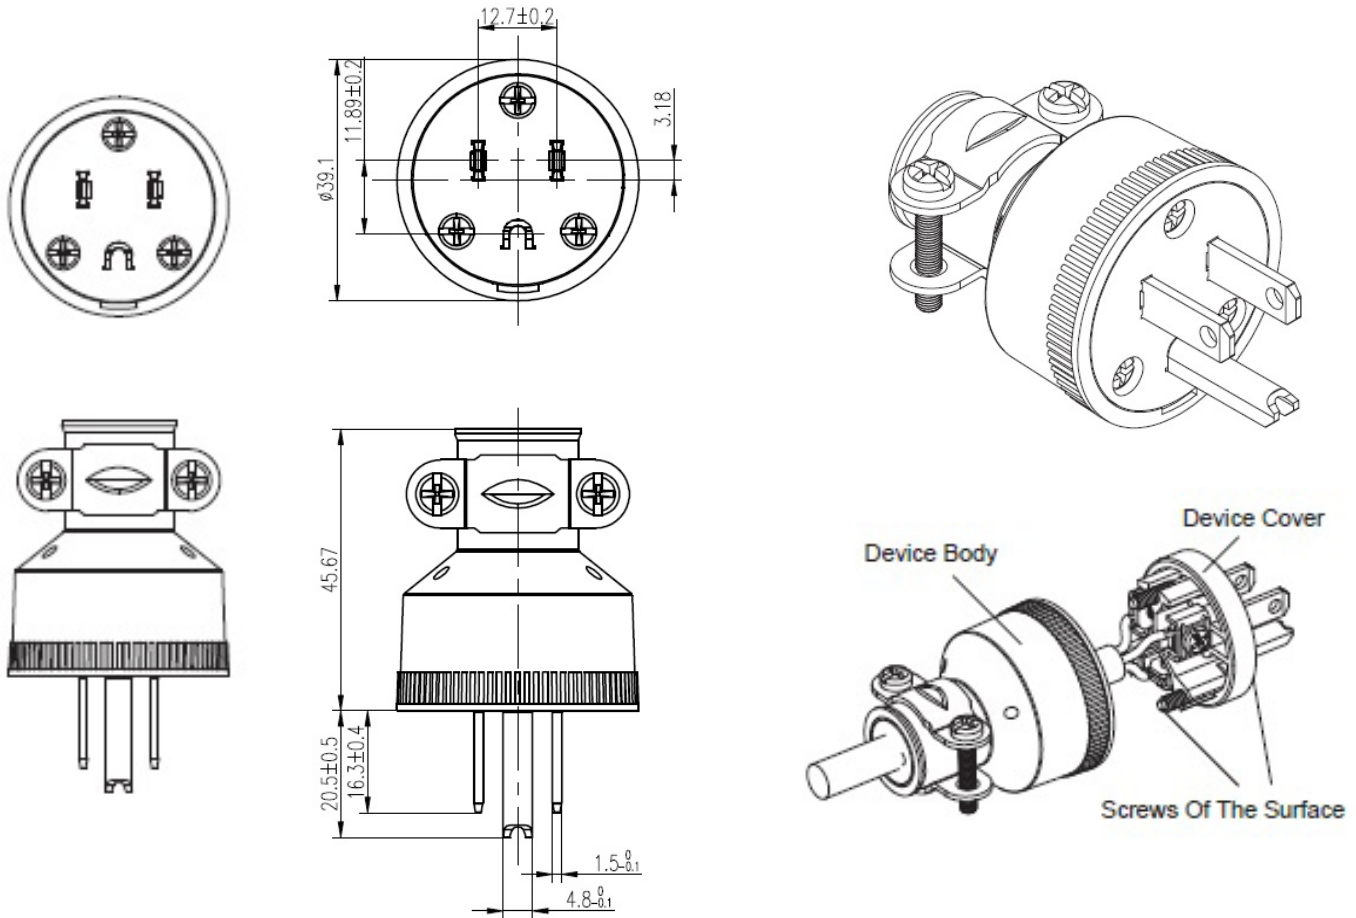

Specifications

Part #	Type	Rating	Cord Type	Wire Size (AWG)
8955	2P, 3W	15A, 125V	SJ/SJT/SJE/S	12/14/16

Installation Instructions

1. Loosen screws at the top and separate device into body and cover, then loosen screws inside.
2. Pass the wires through the cord clamp, remove the insulation to expose the bare copper wire.
3. Insert copper wire to inner wire clamp and tighten screws of all terminals.
4. Align and assemble device body and cover, tighten the cord clamp screws to complete the installation.

WARNING! Incorrect installation of electrical wire and terminals can be hazardous. It can cause an injury or property damage. Ensure you have read all instructions and follow all the steps. Never install a connection during a thunderstorm. Same color screws should be connected with the same color wire. Green screw connects with ground wire, multi-colored screw connects with fire wire, white screw connects with zero wire. To determine the correct wire and terminal to use and to ensure safe installation, seek guidance from a licensed electrical contractor or engineer.

These are recommendations of procedures by PICO. Use the product after determining it's suitability for the application. PICO is not responsible for any risks and liability for use. Statements related to any PICO products which are not present in PICO of Canada Ltd.'s recent publications have no validation unless they are authorized by a PICO representative in writing.

