








www.picocanada.com

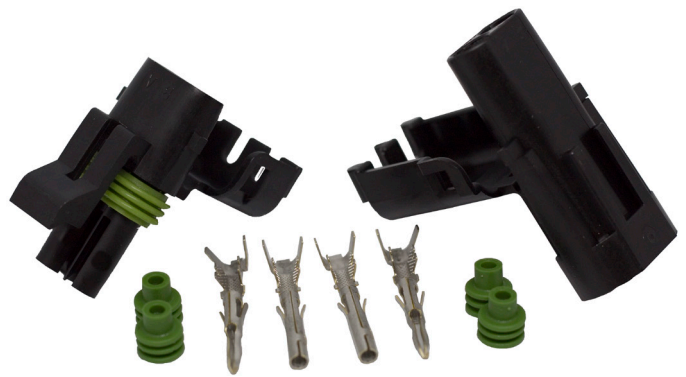

WEATHER PACK ASSEMBLY INSTRUCTIONS

	<p>STEP 1</p> <p>Install terminal seal and strip wire 3/16".</p>
	<p>STEP 2</p> <p>Position the terminal. You may squeeze the insulation crimp lightly with your fingers to maintain position during crimping.</p>
	<p>STEP 3</p> <p>Crimp the terminal.</p>
	<p>STEP 4</p> <p>Just snap the terminal into the connector body and you're done. If you ever need to remove a terminal from a connector body, use PICO # 200-31 which includes an extractor tool, a narrow pick .05" and a wide pick .09".</p>



Visit picocanada.com to learn more